



# Errata EM35x Breakout Board Technical Specification

This document describes issues that pertain to the EM35x Breakout Board. This Errata refers to the following releases of the EM35x Breakout Board Technical Specification (120-2009-000):

- 120-2009-000 revisions A through G

### New in this Revision

No text changes; format changes only per Ember documentation standards

### Contents

Outstanding Issues .....	2
1. External power supply should be limited to 15V and not 20V .....	2
2. VBRD supply unstable when driving high current loads .....	2
3. USB LED DS2 on when USB cable not connected .....	3



---

**Outstanding Issues****1. External power supply should be limited to 15V and not 20V**

There is a bug on the EM35x Breakout Board that prevents operation with an external power supply set to voltages greater than 15V.

Ember provides a number of ways to provide power to the EM35x Breakout Board. One of the methods involves connecting an external supply at J1 (positive) and J32 (GND) and setting it to a DC voltage between 4VDC and 20VDC. Unfortunately, a protection diode tied to the external power supply net is only rated to 15VDC and is not guaranteed to operate at voltages greater than 15VDC.

**Affected Conditions**

This issue is present on revisions B1 and earlier of the EM35x Breakout Board. This issue has been corrected on revisions B2 and later of the EM35x Breakout Board and all revisions of the EM35x NCP Breakout Board.

**Workaround**

When using an external power supply to source power to the EM35x Breakout Board and Module, limit the external power supply to between 4VDC and 15VDC.

**2. VBRD supply unstable when driving high current loads**

There is a bug on the EM35x Breakout Board that prevents stable VBRD generation when driving a high current load (>200mA), like an EM35x module with a high power front end module (FEM).

The EM35x Breakout Board provides power distribution of the VBRD net from a variety of input power sources. When the power source is either an external power supply (connected to J1 and J32) or USB, a low dropout (LDO) voltage regulator steps the input voltage to an output (VBRD) of 3.3V at 250mA (max). It has been determined the LDO output has a slight oscillation even when driving an open circuit. The oscillation gets worse as the load impedance decreases (or the drive current increases). At loads greater than 200mA, the oscillation causes the average voltage potential for VBRD to drop below the POR threshold of the EM35x.

**Affected Conditions**

This issue is present on revisions B1 and earlier of the EM35x Breakout Board. This issue has been corrected on revisions B2 and later of the EM35x Breakout Board and all revisions of the EM35x NCP Breakout Board.

**Workaround**

Ember recommends powering high current loads by connecting an external 3.3V power supply directly to the VBRD net at jumpers J3.2 (positive) and J32 (GND) or to the module power supply (VMOD) at Jumpers J4.2 (positive) and J32 (GND). In either of these scenarios, the load can exceed 200mA without any voltage oscillations as the LDO is bypassed.

---

### 3. USB LED DS2 on when USB cable not connected

There is a bug on the EM35x Breakout Board that causes the USB power source LED DS2 to be on when there is no USB cable connected and thus no USB power source present.

The EM35x Breakout Board provides multiple options for providing power to the board. The board includes LEDs to indicate which voltage source(s) are present. The USB power source LED DS2 should only be on when a USB cable is connected from a PC or USB power supply to the EM35x Breakout Board. DS2 may be on when USB is not present if the serial communication selection jumpers J22, J24, J25, or J26 are connected in the USB configuration (with pins 2 and 3 of these headers connected). The EM35x GPIO PB1, PB2, PB3, and PB4 are routed from the EM35x Module header J21 through these serial communication selection jumpers (J22, J24-26). Since the USB FTDI IC U5 (manufacturer part number FT232RQ) is not powered, any logic high signal levels on EM35x GPIO PB1-4 will supply voltage to the power supply of the FTDI IC U5 through its protection diodes, providing enough voltage on the V\_USB net to light the LED DS2.

#### Affected Conditions

This issue is present on all revisions of the EM35x Breakout Board.

#### Workaround

When a USB cable is not connected to the EM35x Breakout Board, Ember recommends the customer remove the jumpers from headers pin 3 of J22 and J24-26. This will ensure that the USB power source LED is not active.

### After Reading This Document

If you have questions or require assistance with the procedures described in this document, contact Ember Customer Support. The Ember Customer Support portal provides a wide array of hardware and software documentation such as FAQ's, reference designs, user guides, application notes, and the latest software available to download. To obtain support on all Ember products and to gain access to the Ember Customer Support portal, visit [http://www.ember.com/support\\_index.html](http://www.ember.com/support_index.html).

Copyright © 2010-2011 Ember Corporation

All rights reserved. Neither this publication nor any part thereof can be copied, photocopied, reproduced, translated, or converted to any electronic or machine-readable form in whole or in part without prior written approval of Ember Corporation. This documentation is furnished under license and can be used or copied only in accordance with the terms of such license.

The content of this documentation is furnished for informational use only, is subject to change without notice, and does not represent a commitment or guaranty by Ember Corporation. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable as of the time of publication, but Ember Corporation assumes no responsibility or liability for any errors or inaccuracies that may appear in this documentation. DOCUMENTATION IS PROVIDED "AS IS" AND ALL EXPRESS OR IMPLIED CONDITIONS, REPRESENTATIONS AND WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT, ARE DISCLAIMED. Users are responsible for their applications and for the use of any products specified in this document.

Title, ownership, and all rights in copyrights, patents, trademarks, and other intellectual property rights embodied in Ember Corporation's Products and any copy, portion, or modification thereof, shall not transfer to Purchaser or its customers and shall remain in Ember Corporation and its licensors.

No source code rights are granted to Purchaser or its customers with respect to any Ember software. Purchaser agrees not to copy, modify, alter, translate, decompile, disassemble, or reverse engineer Ember hardware (including without limitation any embedded software) or attempt to disable any security devices or codes incorporated in Ember hardware. Purchaser shall not alter, remove, or obscure any printed or displayed legal notices contained on or in Ember hardware.

Ember is a trademark of Ember Corporation. All other trademarks are the property of their respective holders.

